

### Cleaning the Spout

- Open Spout.  
Take the Washing Key. Push the button, see Washing Key LED 2 Green ON, put it on Spout. Hear motor runs one time, Spout opens and ready for cleaning. During cleaning mode, Spout will not send any signals.  
If you push the button, no LED blinks, Washing Key need charge.
- Briefly rinse the spout in warm/cold water while agitate the spout.
- Do not keep the spout submerged in water.
- Do not wash the spout more than once a day.
- Do not wash with water that is too hot to touch.
- Do not bleach or use abrasive cleansers.
- Do not leave a pour spout soaking in water.
- Do not leave a pour spout in a dishwasher.
- When you finish cleaning, please push the Washing Key button until LED 1 Green ON. In 4 seconds, put the Key on the top of Spout and hear motor runs once, spout closes. Spout is activated.



Open Spout



Close Spout

Different Cork sizes available soon